

Sungrow Three Phase Inverter ‘Device Initialization’ Guide

Disclaimer

The material in this document has been prepared by Sungrow Australia Group Pty. Ltd. ABN 76 168 258 679 and is intended as a guideline to assist solar installers for troubleshooting. It is not a statement or advice on any of the Electrical or Solar Industry standards or guidelines. Please observe all OH&S regulations when working on Sungrow equipment.

 
Version	Revision History	Created by	Date
1.0	Draft version	AU Service Team	27 th Jan 2021
2.0	Draft version	AU Service Team	11 th Mar 2022

 
This document only applies to Sungrow Power single-phase inverters (including SG5RT, SG7RT, SG10RT, SG15RT, SG20RT). The information in this document may contain predictive statements including, without limitation, statements regarding the future financial and operating results, future product portfolio, new technology, etc. There are several factors that could cause actual results and developments to differ materially from those expressed or implied in the predictive statements. Therefore, such information is provided for reference purpose only and constitutes neither an offer nor an acceptance. Sungrow Power may change the information at any time without notice.

1. Initialise and Starting up the Inverter

1.1 Device Initialization


- After turning on the AC and DC switches, go to iSolarCloud app and click on 'Local Access' > Scan QR code on the Winet dongle > Click the **Smart Config** button **THREE TIMES** on the WiNet and connect the device with the 'SGxxxxxxxx' Wi-Fi network.
- Login inverter with the account "admin" and password "pw8888"
- Click 'Device Initialization' > Country/Region > Australia (do not select other options)

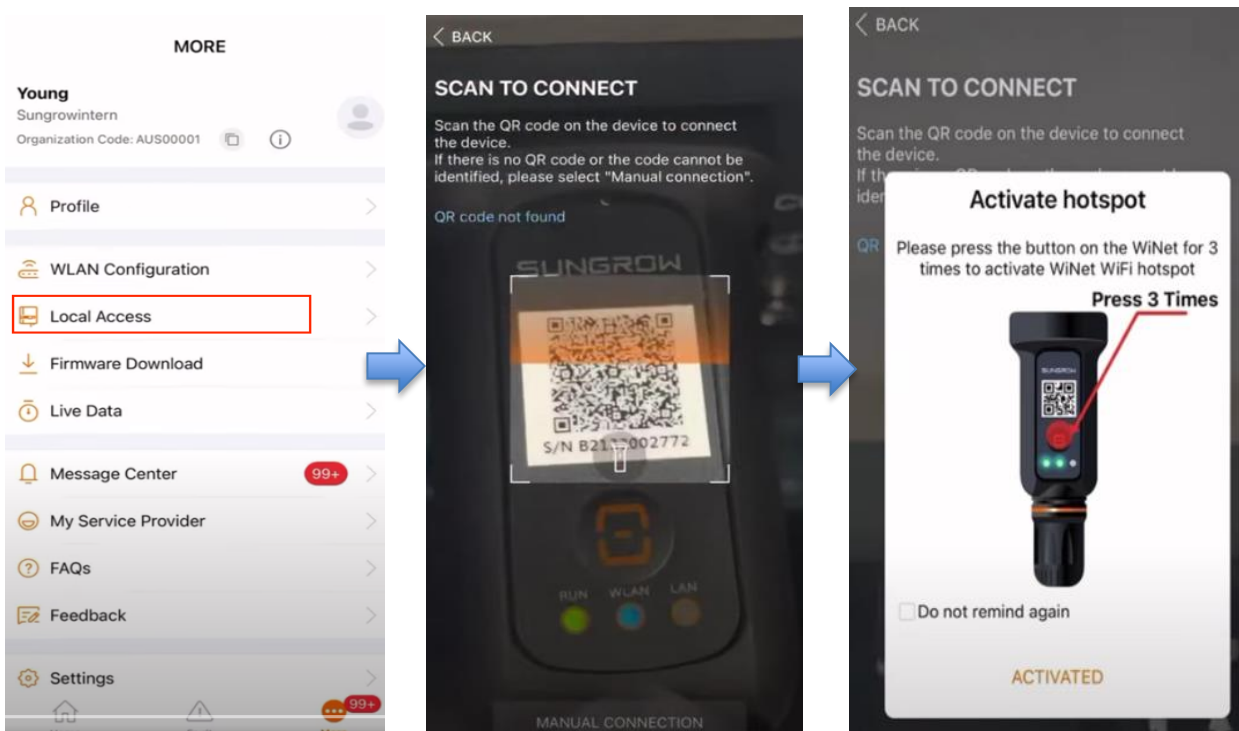

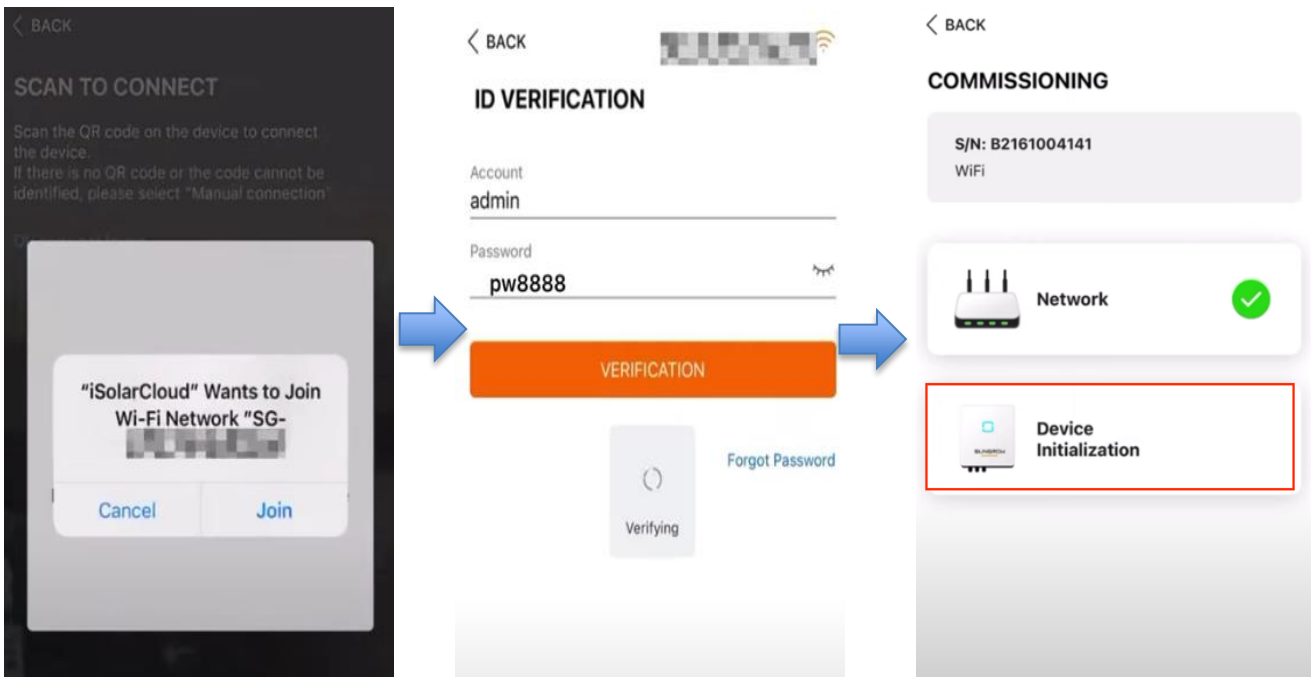

- Select power company to the appropriate region. Find out from the grid company which region the site belongs to. (Inverter needs a firmware update to choose this new Grid standard)

 See Troubleshooting FAQ

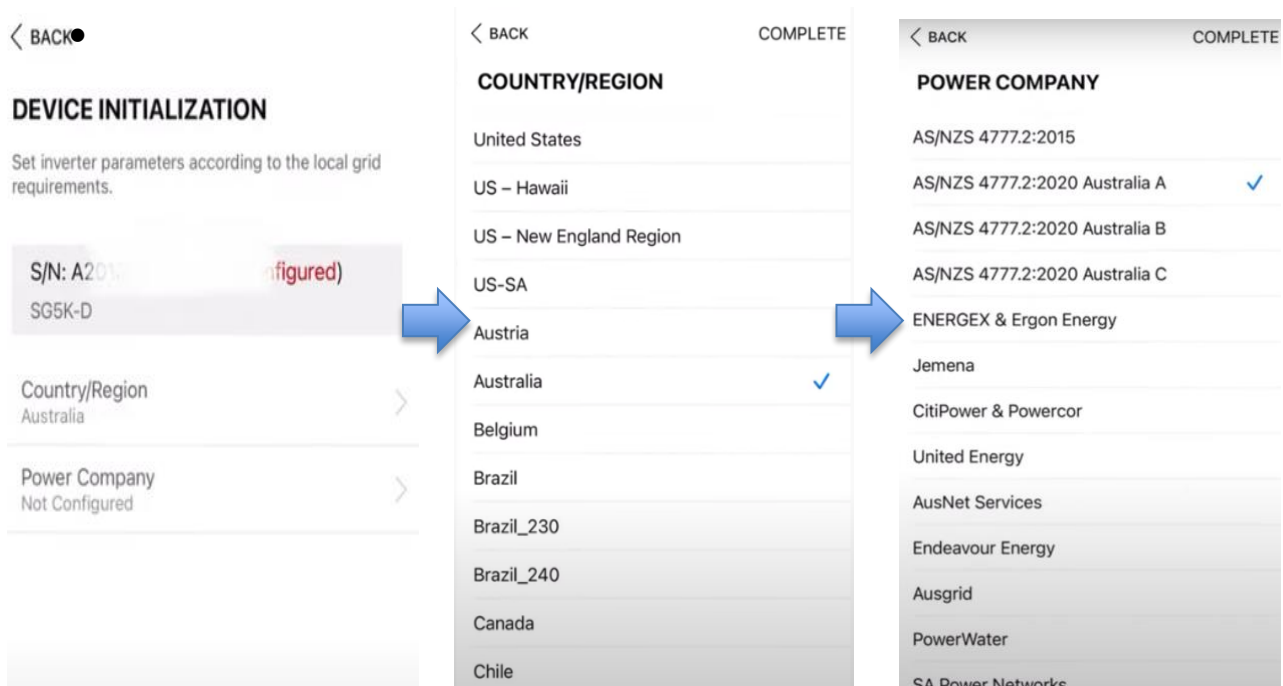

- Set Feed-in Limitation if needed. Set 'Rated power of Original Power Generation Systems' if this site has another inverter. For example, if there is another 5KW inverter this setting needs to be set as 5KW.

- After setting the necessary parameters click on 'Settings' and press 'Complete' to finish Device Initialization.