

## Pre-Commissioning Checklist (C&I)

### **Disclaimer**

*The material in this document has been prepared by Sungrow Australia Group Pty. Ltd. ABN 76 168 258 679 and is intended as a guideline to assist solar installers for troubleshooting. It is not a statement or advice on any of the Electrical or Solar Industry standards or guidelines. Please observe all OH&S regulations when working on Sungrow equipment.*

This document covers the commissioning stage after **the AC and DC cables have been installed and the inverters mounted.**

Applicability: SG30CX, SG50CX, and SG110CX

Please ensure you have the following equipment and preparation:

- Shielded twisted pair (RS485) cable, or Cat 6 and RJ45 plugs used
- **Sungrow energy meter installed (if required)**
  - DTSD1352-C/10(80)A if switchboard less than 80 Amps
  - DTSD1352-C/1(6)A Plus CT's with correct ratio (5 Amp secondary)
- **Internet access and requirements ready (check with a site IT staff)**
- **Logger1000 or EyeM4 devices for monitoring access (Ethernet cable connected if using Logger1000 / Ethernet)**
- iSolarCloud App and installer account
- *Sungrow C&I documents and videos stored on your laptop or phone etc*
- Laptop (preferred), tablet or smart phone for commissioning
- Hand tools
- Lan Tester (Recommended)

Note: EyeM4 dongles are not used where a Logger1000 is connected

Ensure the RS485 cables are connected as per Sungrow documentation

## For Logger1000:



## For EyeM4:



Contact Sungrow Service Department on 1800 786 476 or email to [service@sungrowpower.com.au](mailto:service@sungrowpower.com.au) for any issue, Monday- Friday 9am - 5pm (AEDT).