



Access Error Codes

If the inverter has red light flashing, we can diagnose issues based on error codes.

Please follow the below produces to access error codes.

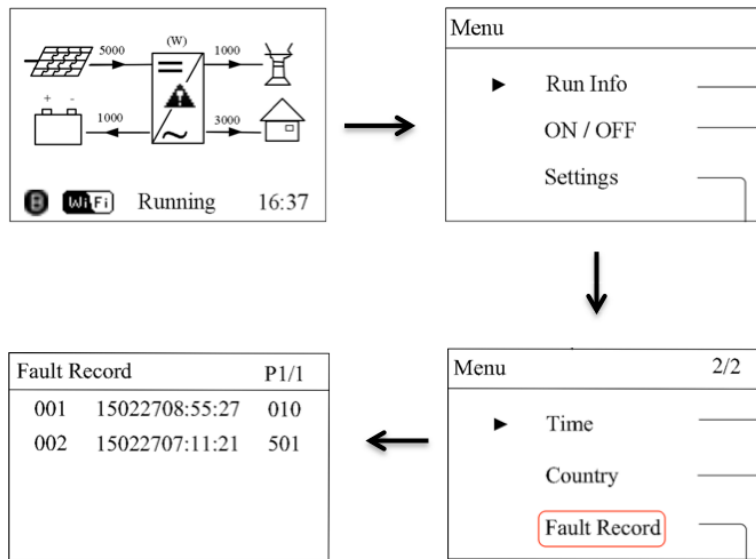

| Fault Record | | P1/1 |
|--------------|----------------|------|
| 001 | 15022708:55:27 | 010 |
| 002 | 15022707:11:21 | 501 |

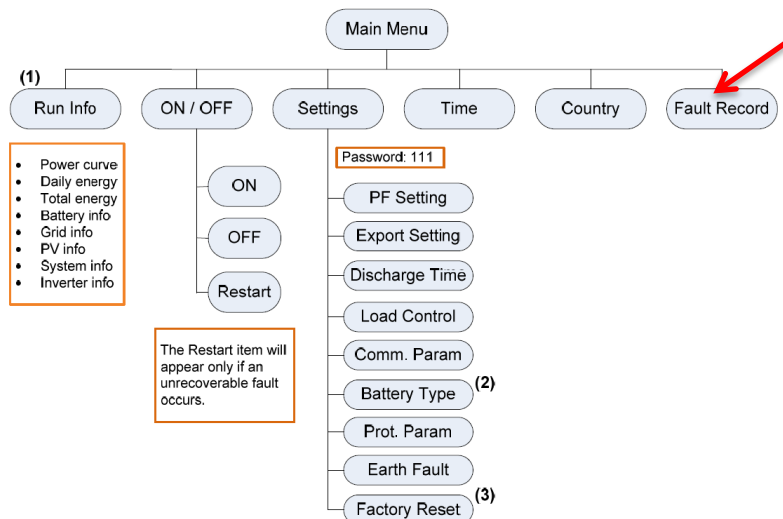

Take a clear picture of this screen, if there is more than one page on this menu, please scroll down, and take clear pictures of the error record list and then send them to service@sungrowpower.com.au.