
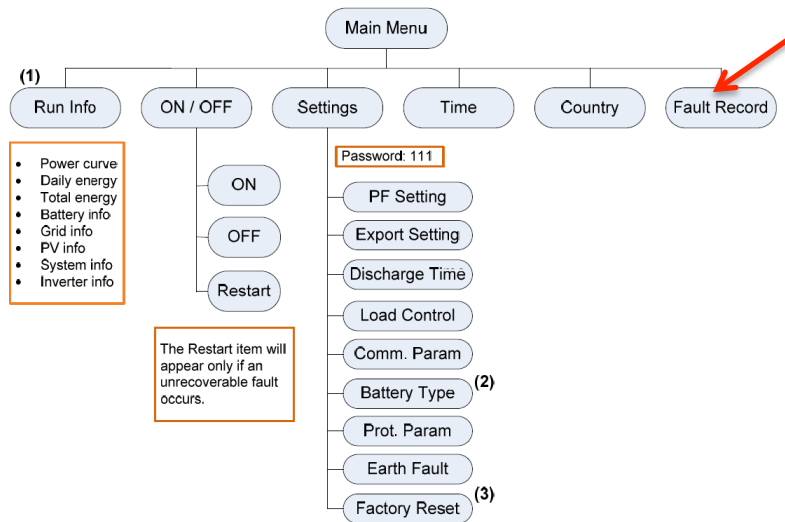


## Access fault codes

If the inverter has red light flashing, we can diagnose issues based on fault codes.

Please follow the below produces to access fault codes.

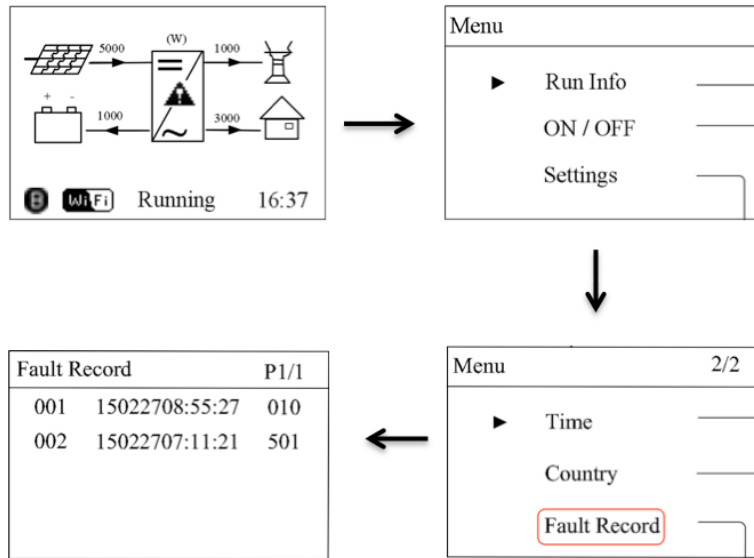

Take a clear picture of this screen, if there is more than one page on this menu, please scroll down, and take clear pictures of the fault record list and then send them to [service@sungrowpower.com.au](mailto:service@sungrowpower.com.au).