

Sungrow Australia Group Pty. Ltd. | 1800 SUNGROW (786 476) service@sungrowpower.com.au | www.sungrowpower.com.au

Local Firmware Upgrade via iSolarCloud

Sungrow latest Wi-Fi modules Wi-Fi V24/V25/V31 can make the firmware upgrade easy. This instruction demonstrates how to use APP **<u>iSolarCloud</u>** with a WiFi module to locally upgrade the firmware for inverters.

Check the Firmware Version:

Navigate to **Main Menu** \rightarrow Select **Settings** \rightarrow Enter '**Aadvance Password**' (contact Sungrow service team) \rightarrow Scroll down and select **Soft Version.** It will then display the current firmware version of the inverter.

Preparation

- A Wi-Fi V24/V25/V31 module
- A smart phone with APP **iSolarCloud** (Android or iPhone)

Firmware Upgrade

Download the new firmware files from the iSolarcloud APP. Click right top setting gear and select the '**Firmware download**' (Figure 1& Figure 2). Select corresponding firmware from the list (Figure 23) and a message on the bottom of the screen will be displayed once the firmware files is downloaded succeed.

15:09	@ Ø 61% 🔳)		ull amaysim 4G	15:09	8
n	۰۰۰ (Login	
-			Account		
			Password		
joj.			••••••	,	
				Login	
				Register	
			Forgot passw	ord	
				Select server	
				Wi-Fi config	
				Firmware download	
	Login inverter		_	Cancel	_

Figure 1 Home Screen

Figure 2 Firmware Download

GD_201906_All_Local Firmware Upgrade via iSolarCloud_V1.0

Sungrow Australia Group Pty. Ltd. | 1800 SUNGROW (786 476) service@sungrowpower.com.au | www.sungrowpower.com.au

amaysim 4G 15:09	@ 0 61%	
〈 Back		
Firmware download		
File list	Downloaded	
SH5K_V11_V1_ P.zip	\downarrow	Ł
SG10KTL-M.zip	\downarrow	Ł
SG15KTL-M.zip	\downarrow	Ł
SG5KTL-M.zip	\downarrow	Ł
SG15KTL-MSG20KTL-MSG	10KTL-MT.zip	Ł
SH5K-20-V13_V076.zip	\downarrow	
SH5K-V13_V48.zip	<u> </u>	L
CrysG2D_V31_V44.zip	\downarrow	Ł

Figure 3 Firmware List

Figure 4 Login and Select WiFi access

After the firmware file download is completed, change the Wi-Fi network on your mobile phone from your home network to the Sungrow inverter network (network starting with SG). Open iSolarCloud app again and click 'Login inverter' \rightarrow select **Wi-Fi** access \rightarrow enter the 'inverter password' \rightarrow click 'Login'. (Figure 4)

Now click on the '**More**' button located on the right bottom corner of the iSolarCloud APP (Figure 55) and Select '**Update firmware**' (Figure 66).

amaysim 🗢	15:12 SG10KTL-M SN:A1810071474	@ Ø 60% 🔳
Fault shutdown		
0 W	—(Z)—	0
Current power		0 w
Power installed		10.0 kW
Yield today		0.0 kWh
Total yield		8 kWh
Home	Chart	*** More

Figure 5 Local Access

Figure 6 Device Upgrade

GD_201906_All_Local Firmware Upgrade via iSolarCloud_V1.0



Sungrow Australia Group Pty. Ltd. | 1800 SUNGROW (786 476) service@sungrowpower.com.au | www.sungrowpower.com.au

After that, it will display the firmware zip file. Select the firmware upgrade file and click on the '**Confirm**' button (Figure 7). Please wait about 10 to 15 minutes for the firmware upgrade



It will display the part number before update and after update, which can help to ensure the files have been updated successfully.

If the firmware upgrade fails, please restart the system (e.g. turn off the inverter and the battery) and then update the file again.

Click here to watch the instruction for upgrading the firmware via iSolarCloud app.