


The Procedures to Commission Winet on the iSolarCloud via Ethernet

Disclaimer


The material in this document has been prepared by Sungrow Australia Group Pty. Ltd. ABN 76 168 258 679 and is intended as a guideline to assist solar installers for troubleshooting. It is not a statement or advice on any of the Electrical or Solar Industry standards or guidelines. Please observe all OH&S regulations when working on Sungrow equipment.

Step 1 Connect Ethernet cable with Winet.


Step 2 Click the button on Winet for three times then choose SG signal on appearing in the mobile.

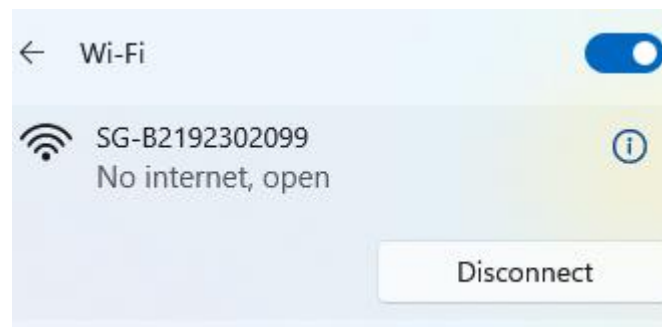


Step 3 Open a browser on the mobile device and put in IP as 11.11.11.1 and then log in as follows. Account:admin; Password:pw8888.

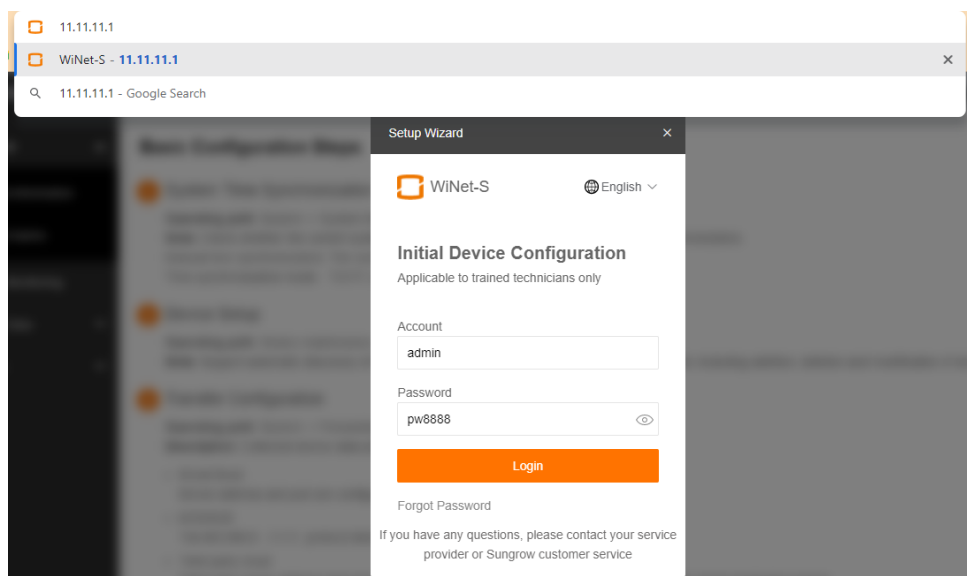

Step 4 Navigate to System and locate Port parameter under that tab.

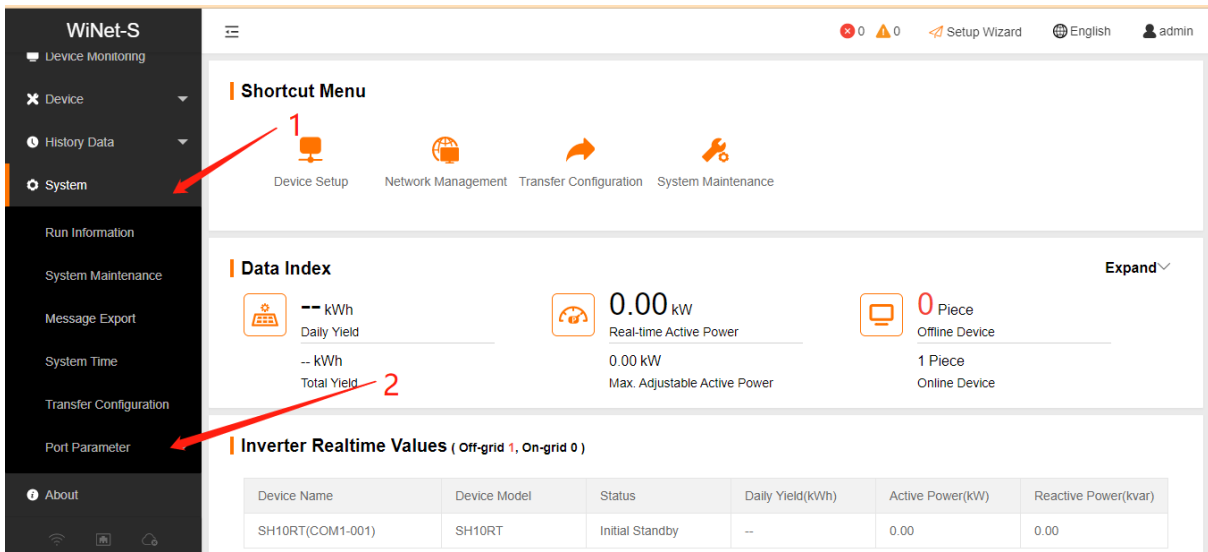

Step 5 Click Ethernet and on the right-hand side, you will find DHCP settings. You can either use DHCP or turn off the function by put in the Static IP manually.

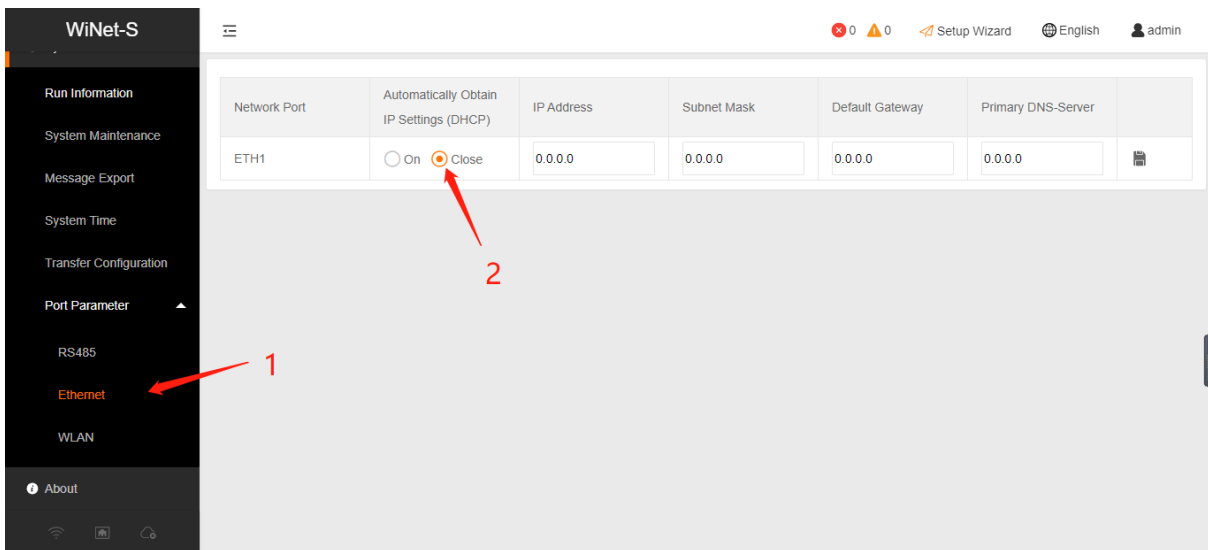

If the issue persists after following above procedures, please take photos testing on site and contact Sungrow Service Department on 1800 786 476 or email to service@sungrowpower.com.au, Monday- Friday 9am - 5pm (AEDT).