

Sungrow energy meter placement

Disclaimer


The material in this document has been prepared by Sungrow Australia Group Pty. Ltd. ABN 76 168 258 679 and is intended as a guideline to assist solar installers for troubleshooting. It is not a statement or advice on any of the Electrical or Solar Industry standards or guidelines. Please observe all OH&S regulations when working on Sungrow equipment.

Physical location:

The purpose behind Sungrow Energy Meters is to measure current flow to and from the property it is installed in, and enable export limiting.

For this purpose, it acts in the same way a network meter does. So, the logical physical location for this is close to the network meter, and after the main switch.

‘ALL’ loads and inverters must be on the secondary side of the meter.

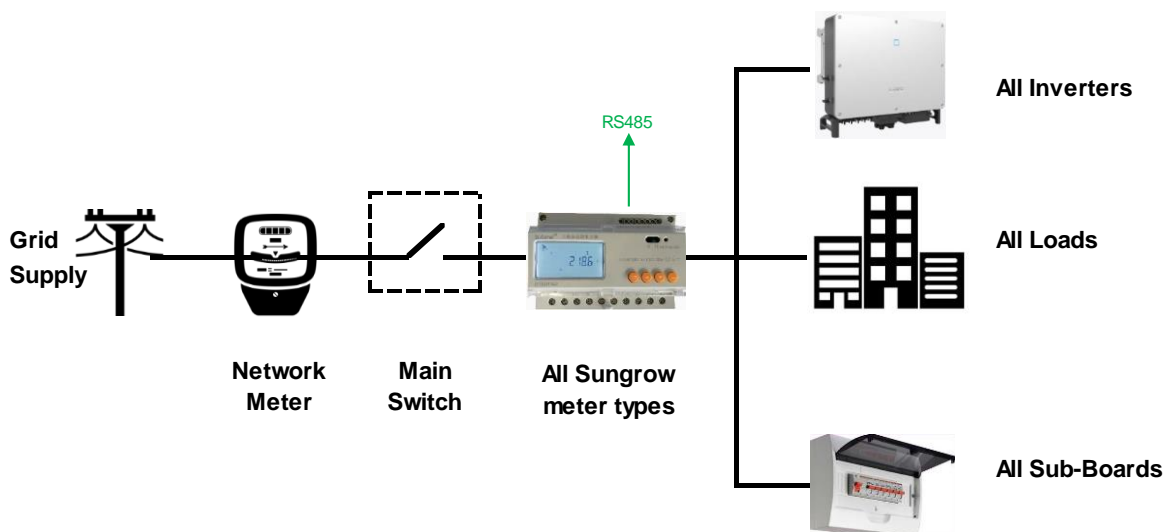

Picture 1 – Energy Meter SLD

If the meter is located at any other position, false readings will result.

If you have any questions related to the energy meter, please contact Sungrow Service Department on 1800 786 476 or email to service@sungrowpower.com.au, Monday-Friday 9am - 5pm (AEDT).