

Check Ethernet Communication Parameters via LCD – SH5K series

Disclaimer

The material in this document has been prepared by Sungrow Australia Group Pty. Ltd. ABN 76 168 258 679 and is intended as a guideline to assist solar installers for troubleshooting. It is not a statement or advice on any of the Electrical or Solar Industry standards or guidelines. Please observe all OH&S regulations when working on Sungrow equipment.

To check the communication parameters via the LCD screen for the Ethernet connection, go into the main menu > Settings > Password 111 > Scroll to ‘**Comm. Param**’ and enter

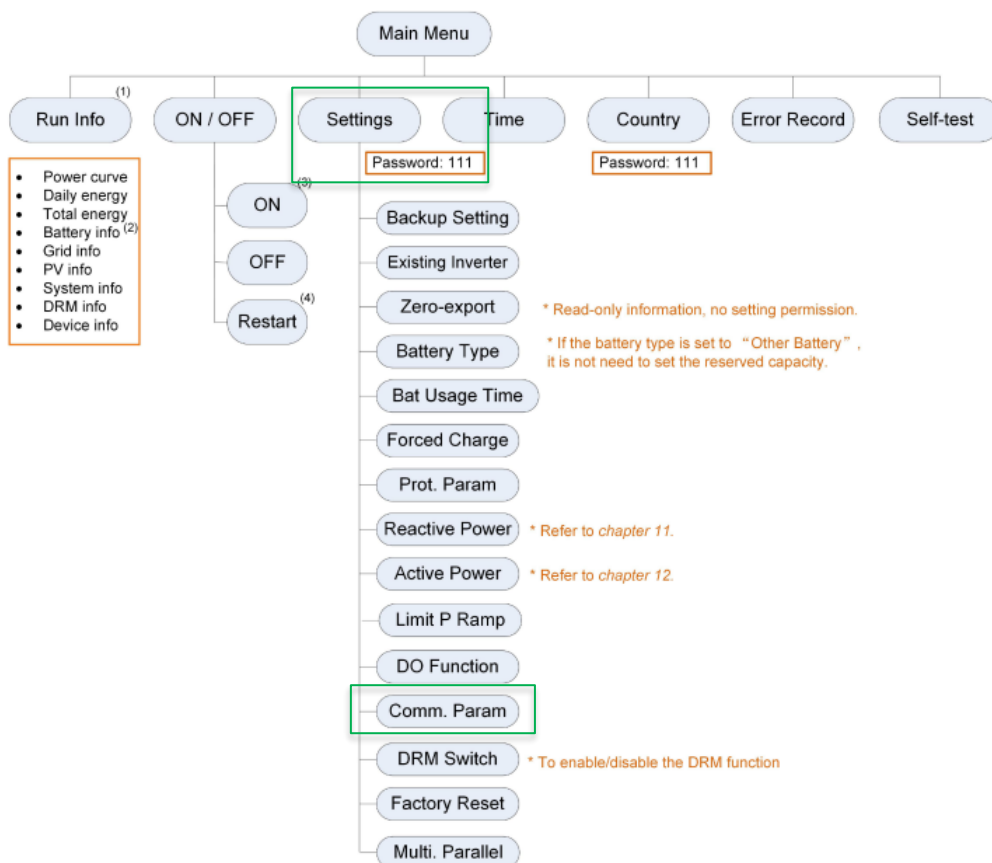


Figure 1 – Menu Tree

Checking and setting Com Parameters:

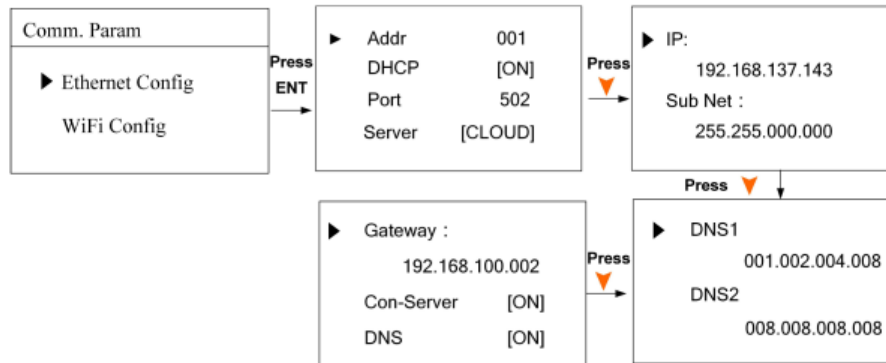


Figure 2 – Default IP address information screens

Scroll down to check IP address. Take a photo of the screen and send to Sungrow.

Note:

Setting DHCP to 'ON' – Modem will automatically assign IP address.

Setting DHCP to OFF – Manually enter IP address info

If you have any questions, please contact Sungrow Service Department on 1800 786 476 or email to service@sungrowpower.com.au, Monday- Friday 9am - 5pm (AEDT).