
Sungrow SBR Battery – Sunclix and Evo MC4 connectors

There are a pair of either Sunclix (older models) or Evo MC4 connectors supplied with your Sungow Hybrid Inverter, and the SBR battery range.

When making the DC connectors, it is vital that the pins are pushed ALL THE WAY into the connector body, UNTIL THE PINS LOCK IN PLACE, otherwise the pins will be pushed back when the connection is made and there will be no DC input to the inverter from battery. Multi meter may even show DC at the plugs.

The small wings must lock in place.

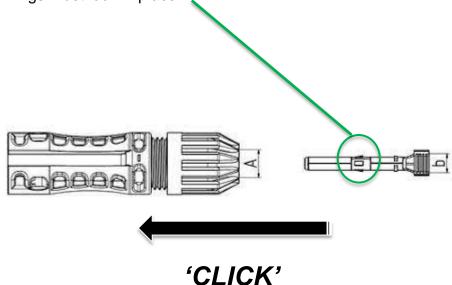

If the pins don't connect properly, the system will show a **703 error**, even if the battery SOC% is shown.

Flexible cable can be difficult to push in, and solar cable should be easier.